## **19060** and similar pumps

**Problem:** The pump is not sucking!

**Solution:** Open the pump on both suction side (01) and discharge side (02). Remove possible dust/dirt and clean the membrane. In 99% of the cases the pump should be starting sucking again. This problem can be avoided by installing a filter on the suction side.



























